



SAFETY NOTICE

TAKE CAUTION

This machine has an **Operator Assist Start/Stop** mechanism. While this means it will start automatically upon reaching a set environmental temperature, it is essential that a few owner/operator precautions are employed to maintain safety.

1. **Conduct annual maintenance by an authorised agent!**
2. **Supervise your wind machine during operation!**
3. **Never operate your wind machine in winds greater than 8 km/hr..!**
4. **Never operate your wind machine during foggy conditions!**
5. **Always keep the tower between yourself and the fan!**
6. **Never climb the wind machine tower!**
7. **Never adjust, alter or modify any part of the wind machine!**

During the frost season your wind machine is the most important piece of machinery you own and needs constant attention to ensure optimum operational status.

The Operator Assist Start/Stop system does not manage fuel, oil, water, battery condition or damage to connections. **Maintain your battery** checking that the voltage levels are maintained.

Ensure **fuel level** and **fuel quality** is maintained.

Start your machine and operate under full load **at least once a month** when conditions allow.

An Operator Assist Start/Stop wind machine may potentially operate for hours, after it starts at one degree, and yet frosts not occur. **Assess the conditions** of the frost event to avoid unnecessary operation.

Ensure that you start your wind machine one degree (1 deg C) before freezing.

Turn your machine **OFF** when not required to be on stand-by.

24HR CUSTOMER SUPPORT LINE 03 5725150

FMR GROUP Ltd, 432 Rapaura Rd, Rapaura Rd3
Blenheim 7372, New Zealand
info@fmrgroup.co.nz, www.fmrgroup.co.nz

